


Parts List




Main assembly

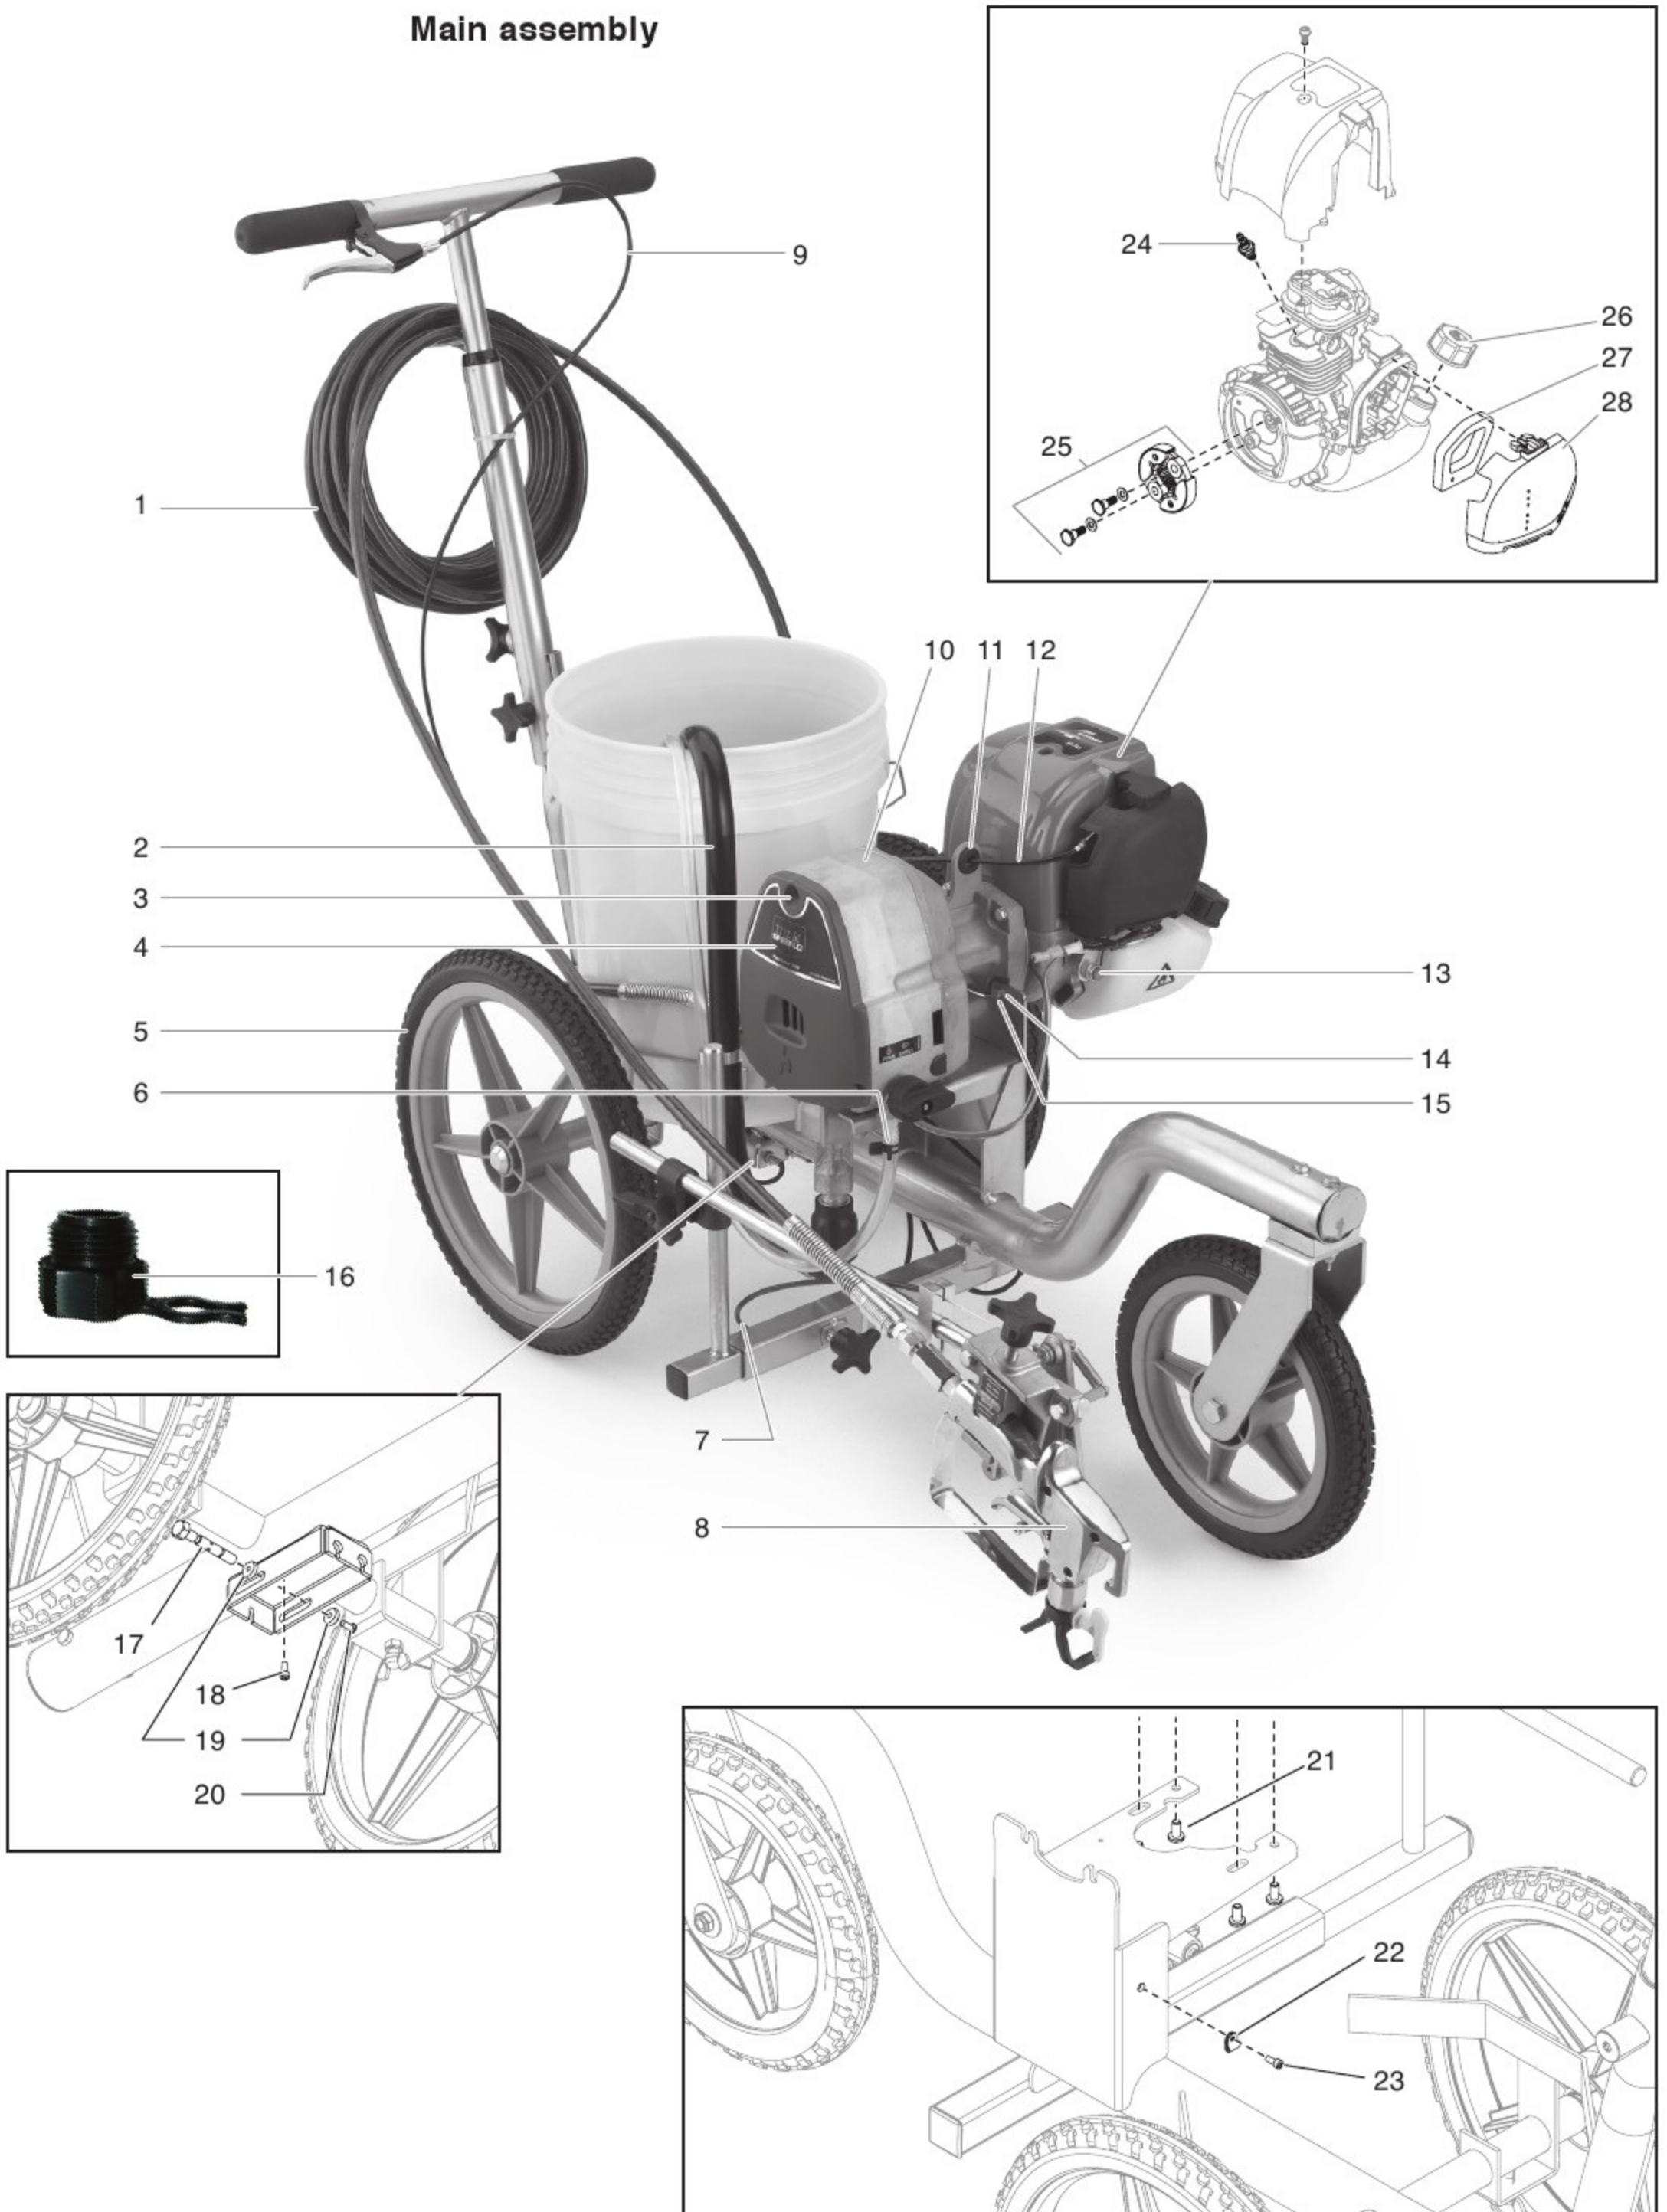

Item	Part No.	Description	Quantity
1	316-505	Spray hose	1
2	0293932	Suction set assembly	1
3	9805251	Front cover screw	3
4	0552432	Front cover	1
5	0293937	Cart assembly*	1
6	0327226	Return tube clip	1
7	0293170	Gun cable	1
8	-----	Spray gun assembly*	1
9	0293172	Cable assembly	1
10	-----	Drive assembly*	1
11	800-036	Rubber grommit	1
12	0293171	Engine cable	1
13	0293930	Shutoff switch	1
14	858-003	Washer	2
15	759-107	Engine mounting screw	2
16	0515281	Cleaning adapter	1
17	0293595	Cable pin	1
18	756-076	Screw	1
19	759-206	Pin cap	2
20	730-260	Screw	1
21	9805250	Gear housing mounting screw	4
22	9890219	Clip	1
23	9805256	Screw	1
24	0293925	Spark plug	1
25	0293929	Clutch assembly	1
26	0293928	Gas cap assembly	1
27	0293926	Filter	1
28	0293927	Filter cover	1


* See separate listing

Drive assembly

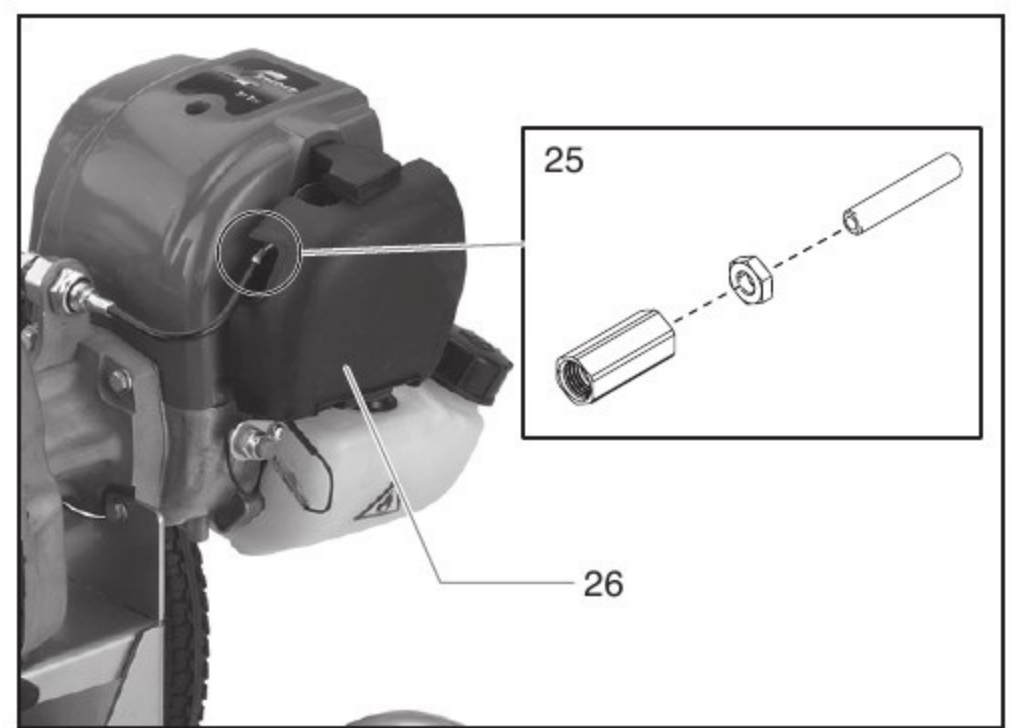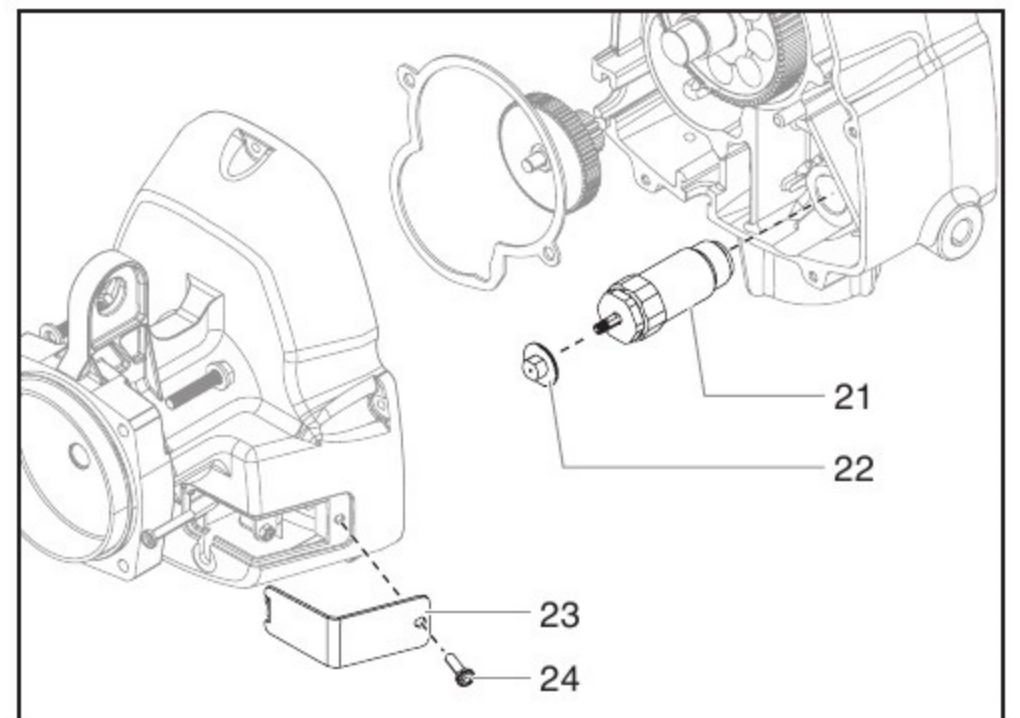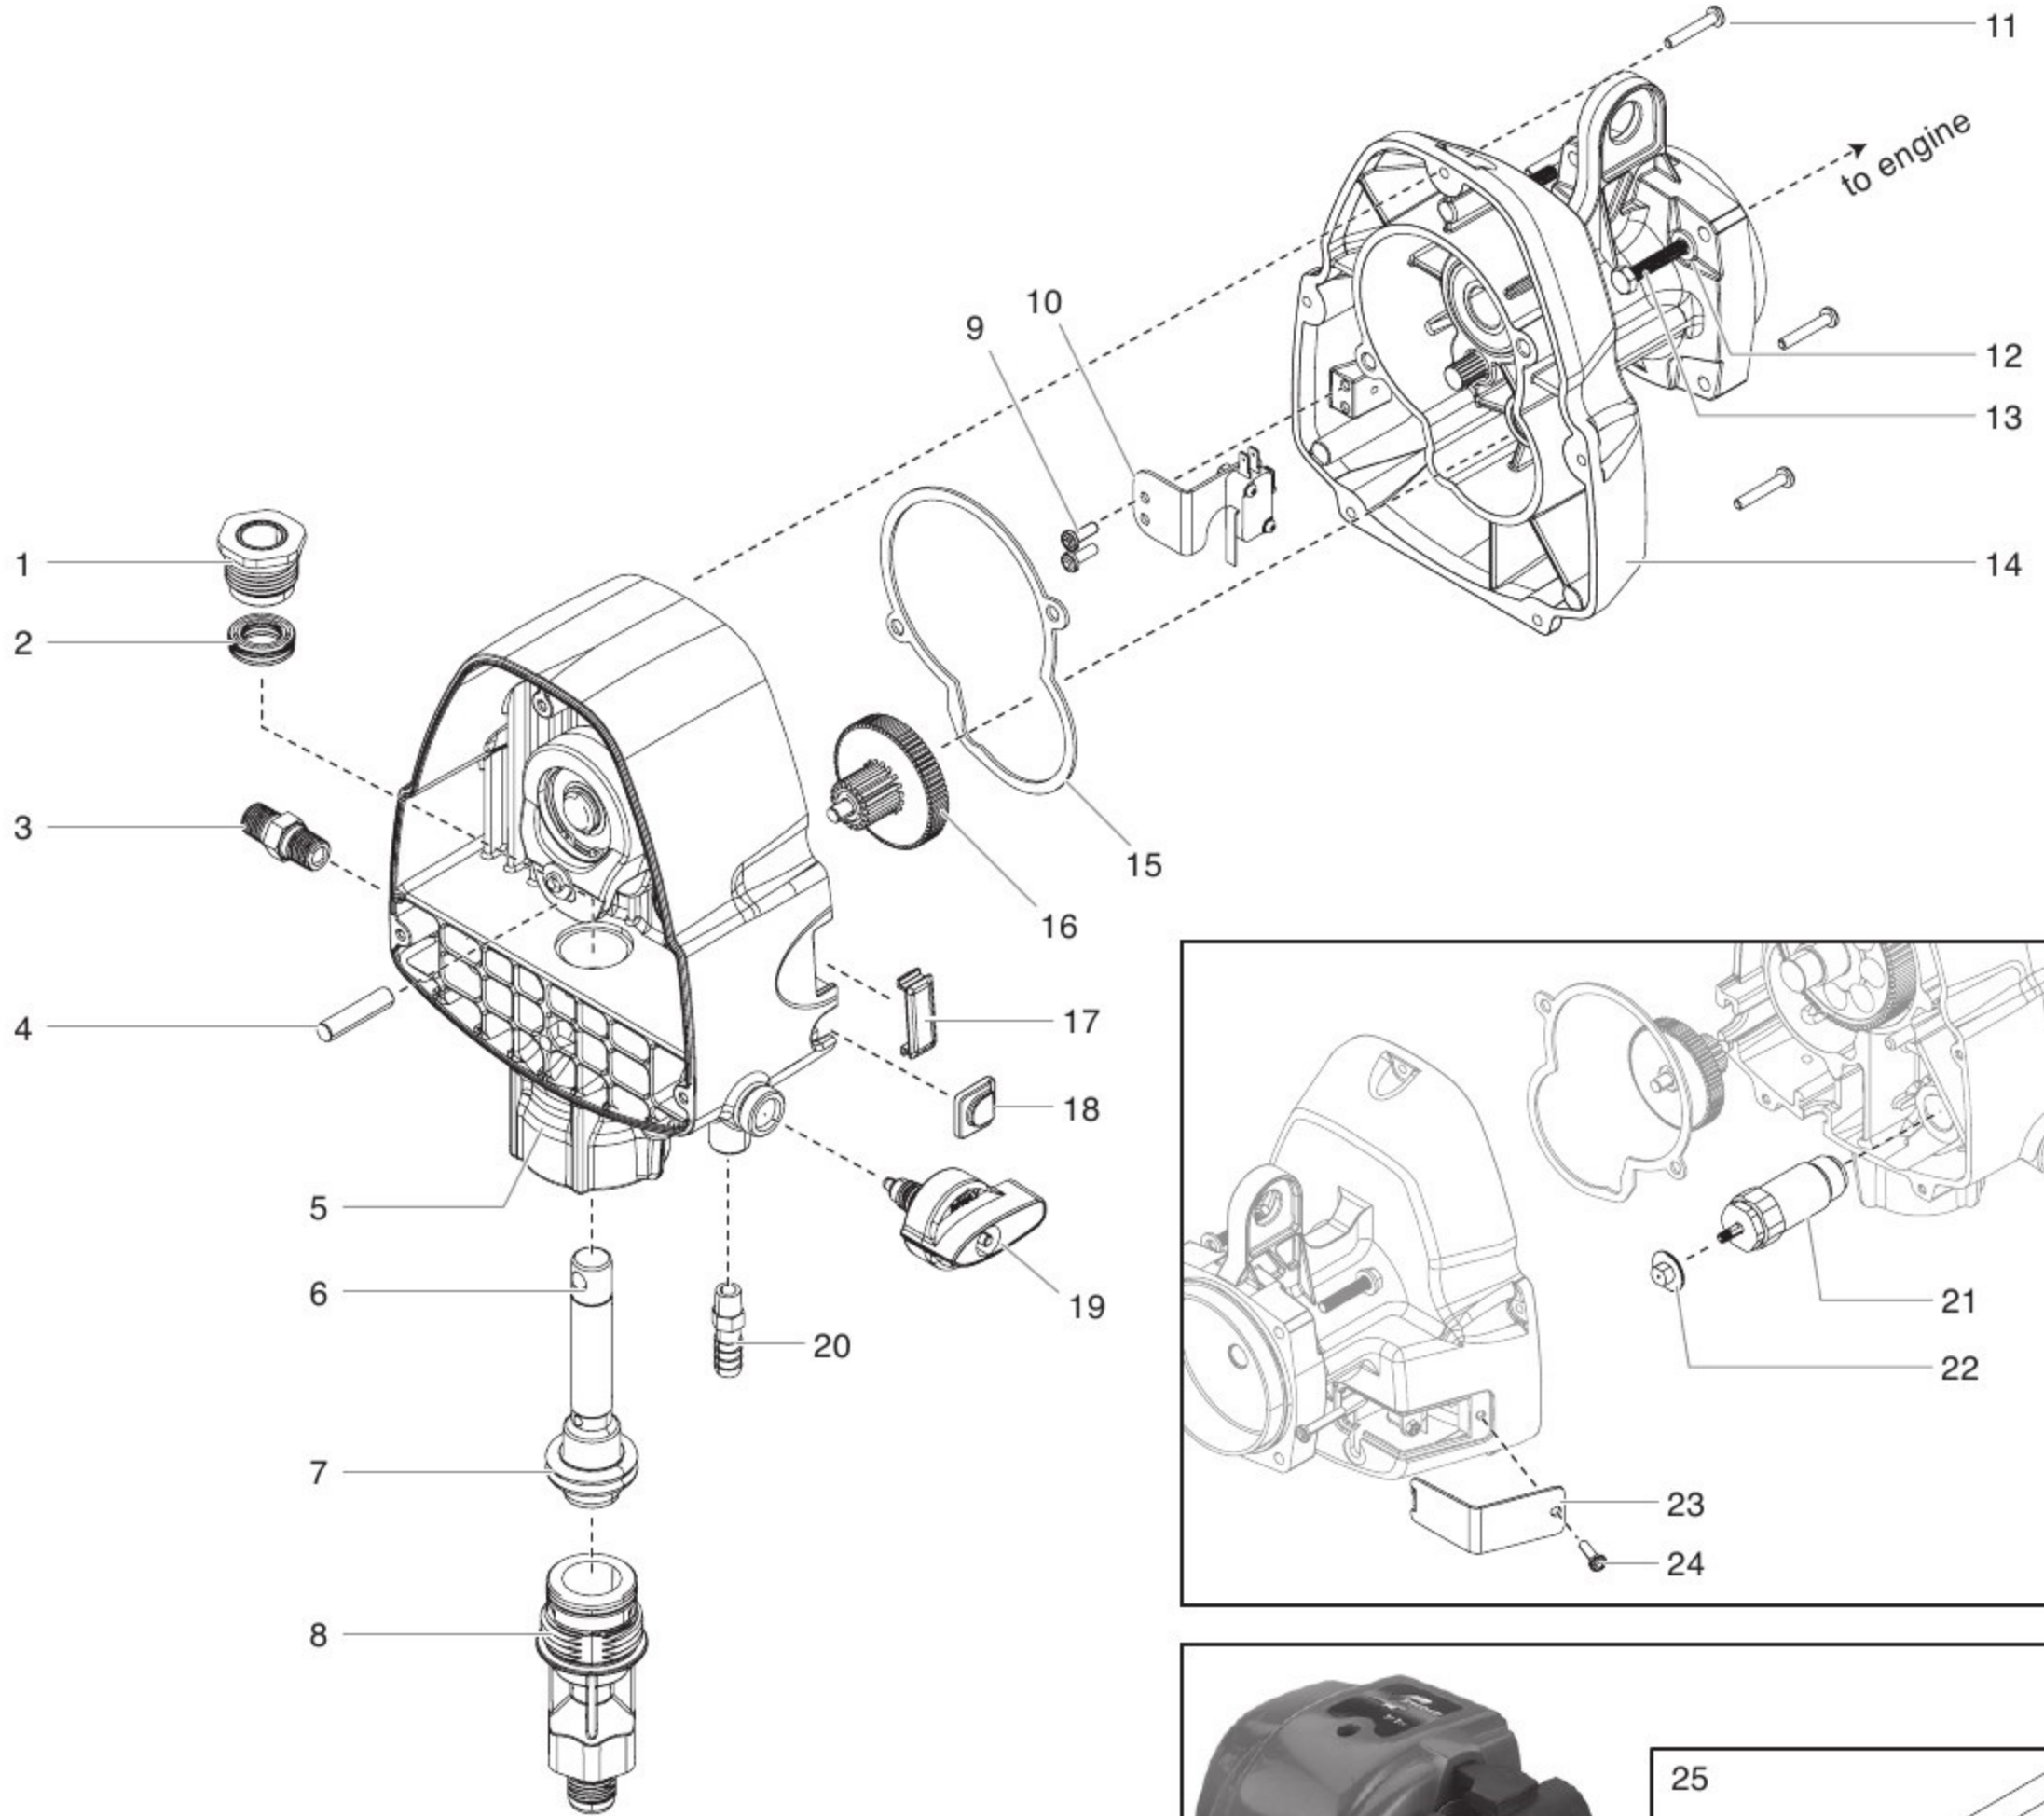



Item	Part No.	Description	Quantity
1	0512387	Top nut	1
2	0516302	Upper packing	1
3	0516300	Hose fitting	1
4	-----	Dowel pin	
5	0293931	Pump housing assembly (includes item 4)	1
6	0293950	Piston assembly	1
7	0512533	Lower seal	1
8	759-379	Sureflo valve assembly	1
9	9805251	Screw	2
10	0293935	Microswitch assembly	1
11	9805274	Screw	5
12	858-003	Washer	2
13	759-107	Screw	2
14	0293936	Clutch assembly (includes items 9-10)	1
15	0293483	Gearbox gasket	1
16	0293938	Gear assembly	1
17	759-222	Plug	1
18	0293588	Plug	1
19	759-380	PRIME/SPRAY valve assembly	1
20	9885553	Return tube fitting	1
21	0293939	Transducer assembly	1
22	0293499	Throttle cable nut	1
23	0293480	Access cover	1
24	9805410	Screw	1
25	0293941	Adjustment rod assembly	1
26	0293943	Engine	1
	759-365	Fluid section repacking kit	

Cart assembly

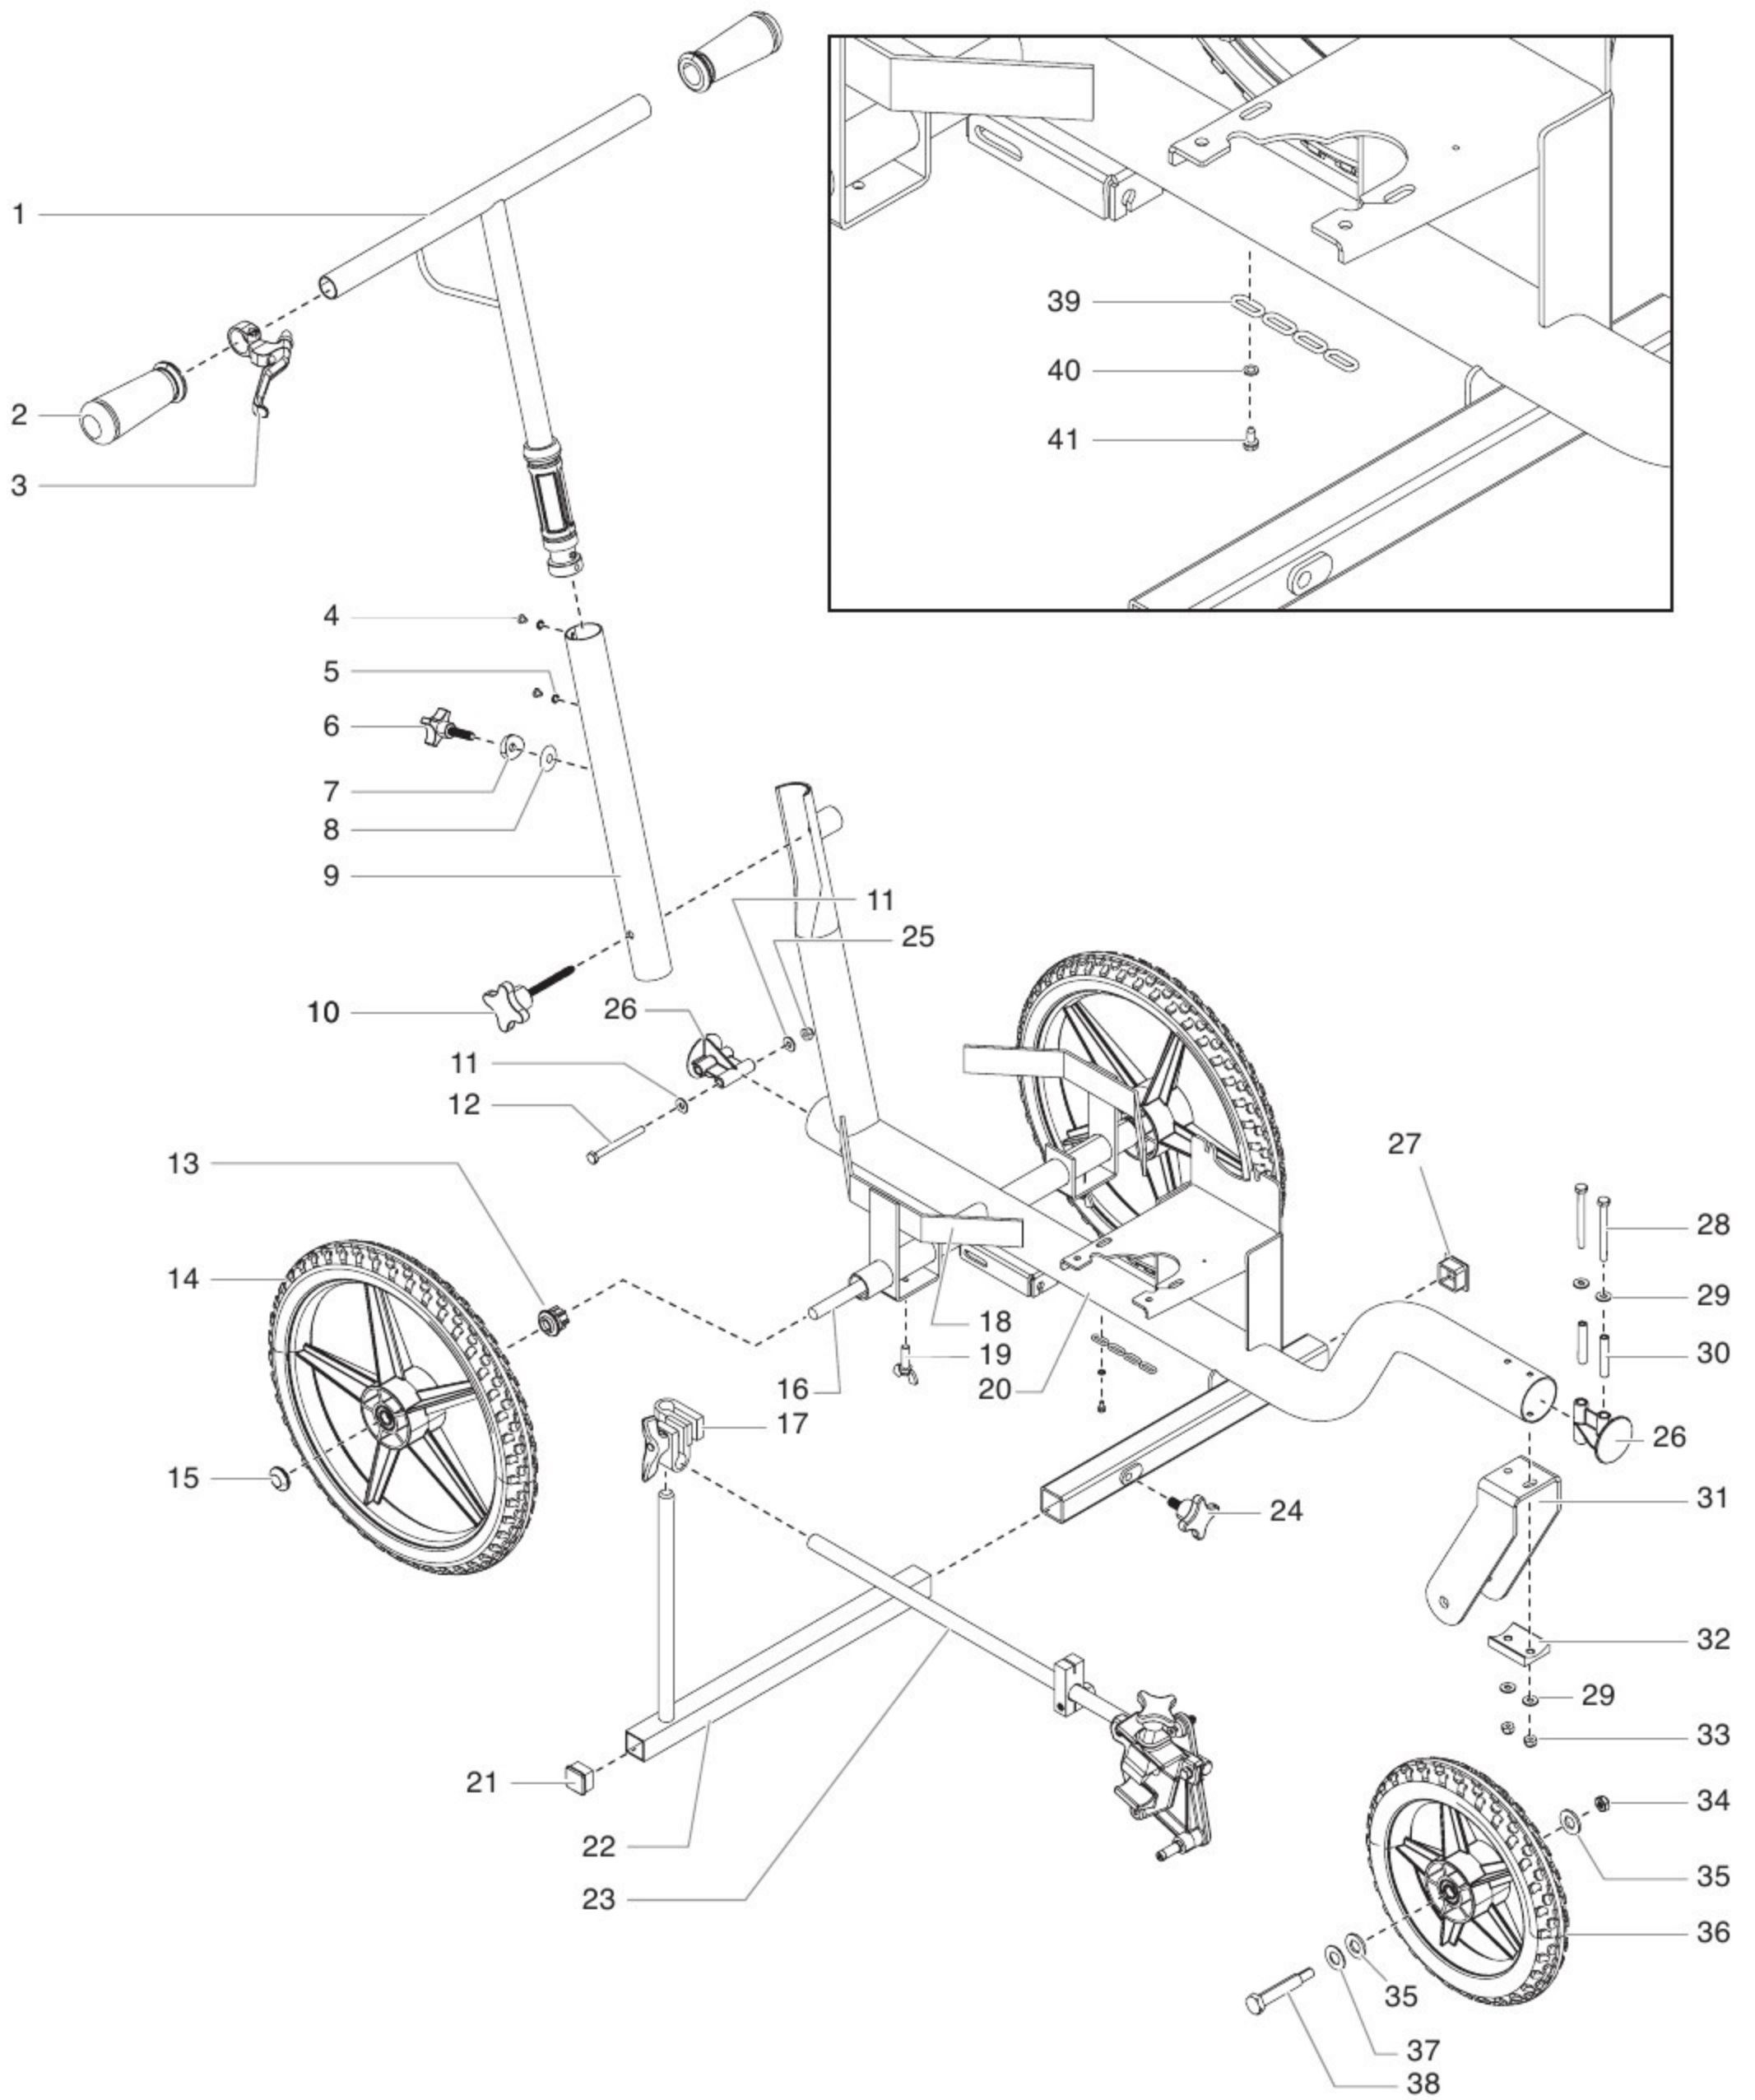


Item	Part No.	Description	Quantity
1	0293945	Handle assembly	1
2	424-245	Handle grip	2
3	759-215	Lever assembly	1
4	856-921	Screw	2
5	856-002	Washer	2
6	0293508	Adjustment knob	1
7	0293521	Handle spacer	1
8	0293594	Rubber film	1
9	0293949	Middle tube	1
10	0293537	Knob	1
11	858-001	Washer	2
12	0293507	Screw	1
13	0516571	Bushing	2
14	759-293A	Wheel	2
15	9890113	Wheel cap	2
16	759-194	Axle	1
17	759-329	Clamp assembly	1
18	759-283	Bucket holder	2
19	759-320	Screw	2
20	0293947	Cart weldment	1
21	756-056	Plug	1
22	759-188	Gun post assembly	1
23	0509171A	Gun holder assembly (see separate listing)	1
24	759-306	Knob	1
25	770-144	Nut	1
26	0293519	Plug	2
27	757-055	Plug	1
28	9805411	Screw	2
29	858-001	Washer	4
30	0293596	Tube spacer	2
31	0293942	Fork leg	1
32	0293946	Wheel support	1
33	770-144	Nut	2
34	759-456	Nut	1
35	0293581	Spacer	2
36	759-298	Wheel	1
37	759-439	Washer	1
38	0293516	Front axle	1
39	759-326	Grounding chain	1
40	759-440	Washer	1
41	759-325	Screw	1

Gun holder assembly

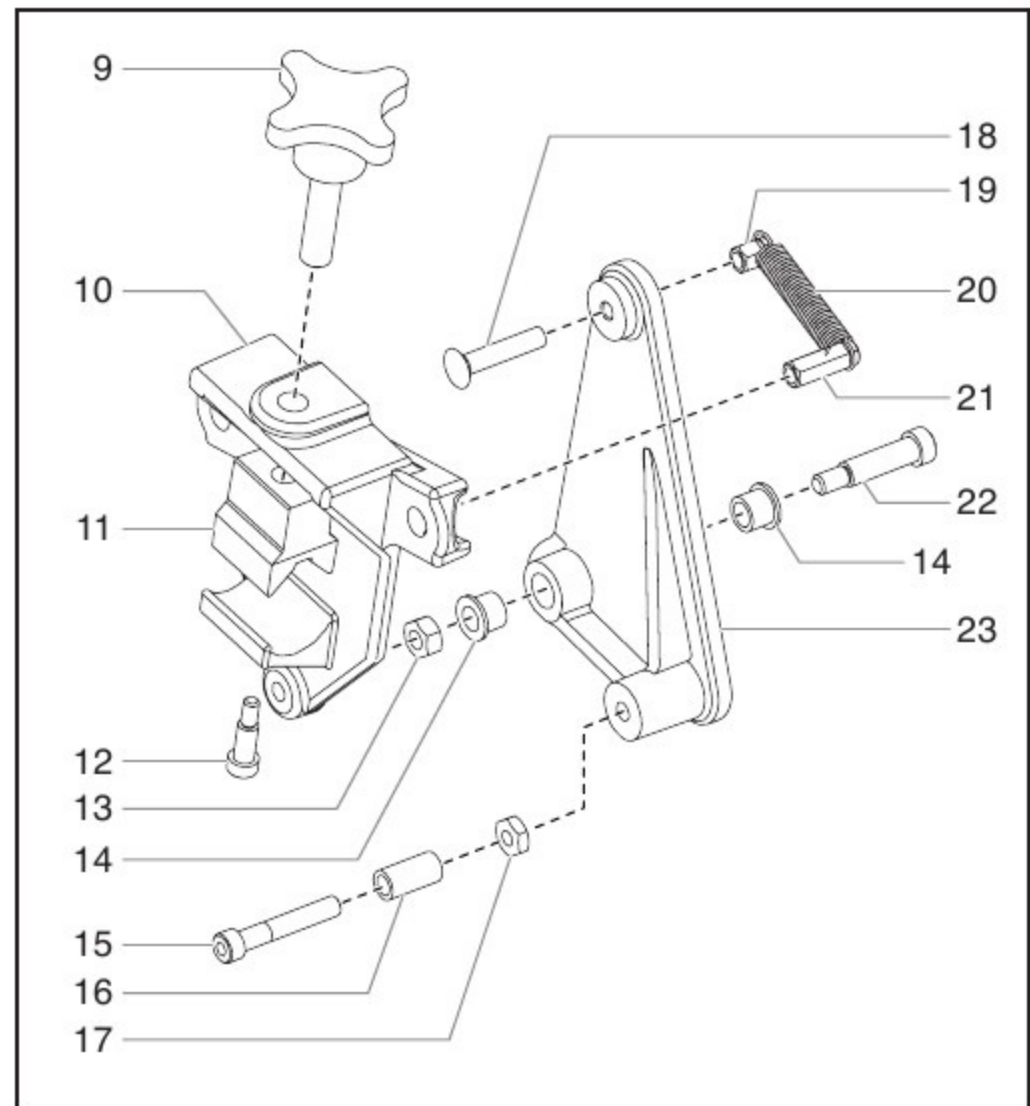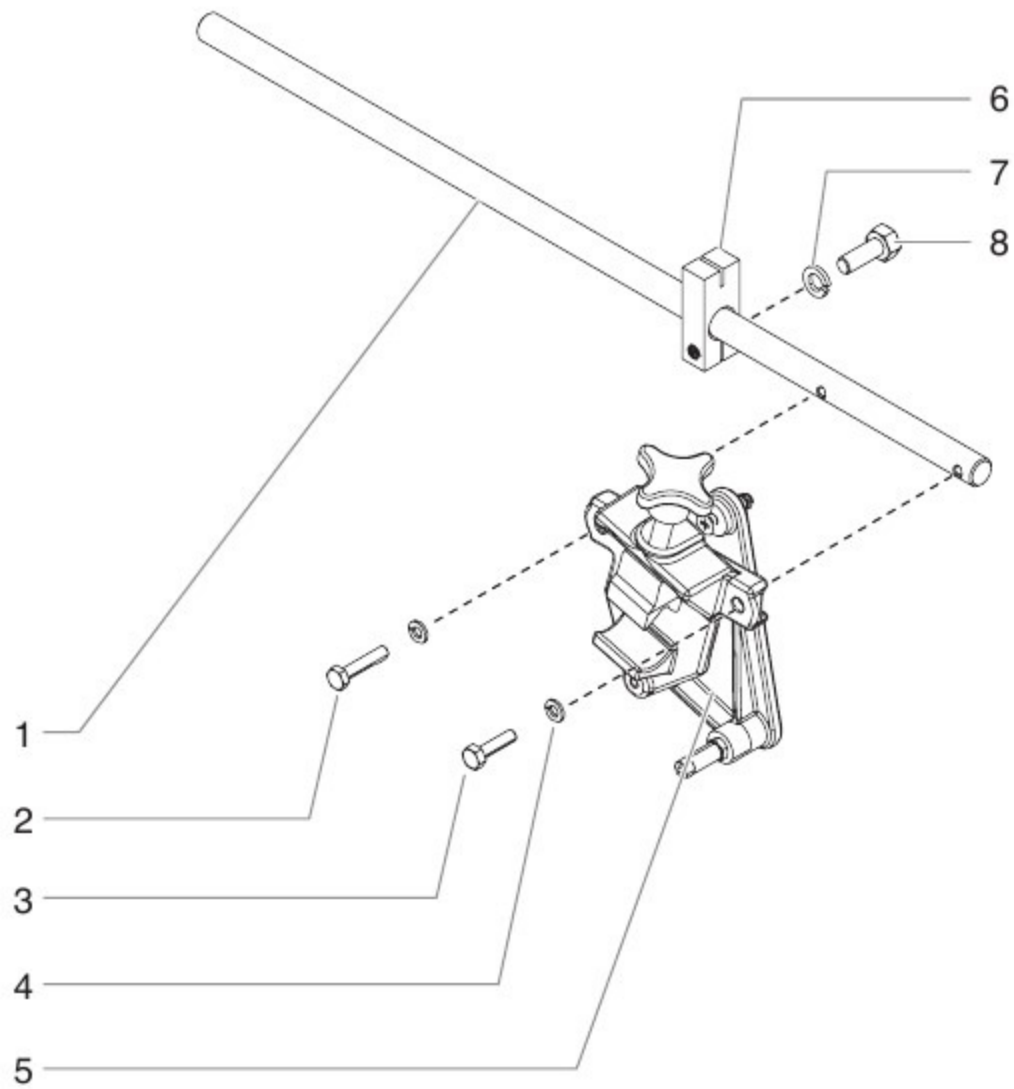

Item	Part No.	Description	Quantity
1	759-415	Support arm	1
2	858-644	Screw	1
3	858-636	Screw	1
4	858-002	Washer	2
5	-----	Gun holder assembly (includes items 9-23)	1
6	759-414	Clamp	1
7	0509292	Washer	1
8	862-436	Screw	1
9	756-034	Knob	1
10	424-201	Gun holder	1
11	759-316	Clamp block	1
12	756-037	Screw	1
13	858-601	Nut	1
14	424-248	Flange bearing	2
15	858-653	Screw	1
16	424-249	Bearing sleeve	1
17	858-603	Nut	1
18	703-079	Screw	1
19	759-056	Spring holder (short)	1
20	0509781	Spring	1
21	759-057	Spring holder (long)	1
22	860-936	Screw	1
23	424-202	Lever	1

Electrical Schematic

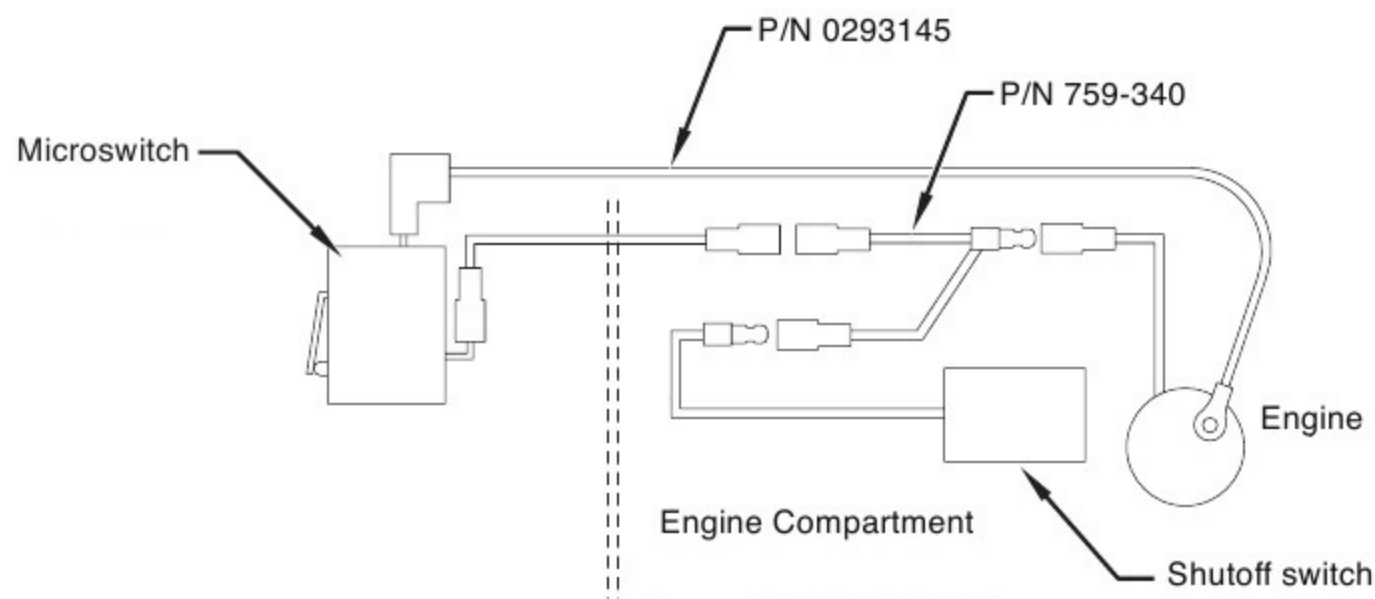

NOTE: All electrical work should be performed by an authorized service center.

Labels

Part No.	Description
0555790	Front cover label
313-176	Engine label
0516801	PRIME/SPRAY label
313-771	Warning label, injection
313-784	Warning label, fire/explosion
313-1387	Warning label, empty gas tank
0293968	"Do not pull cable" label
313-2772	Label, gun mount
313-2771	Label, tip size