


Clarke® Super 7R Edger
Drawing - 9/96

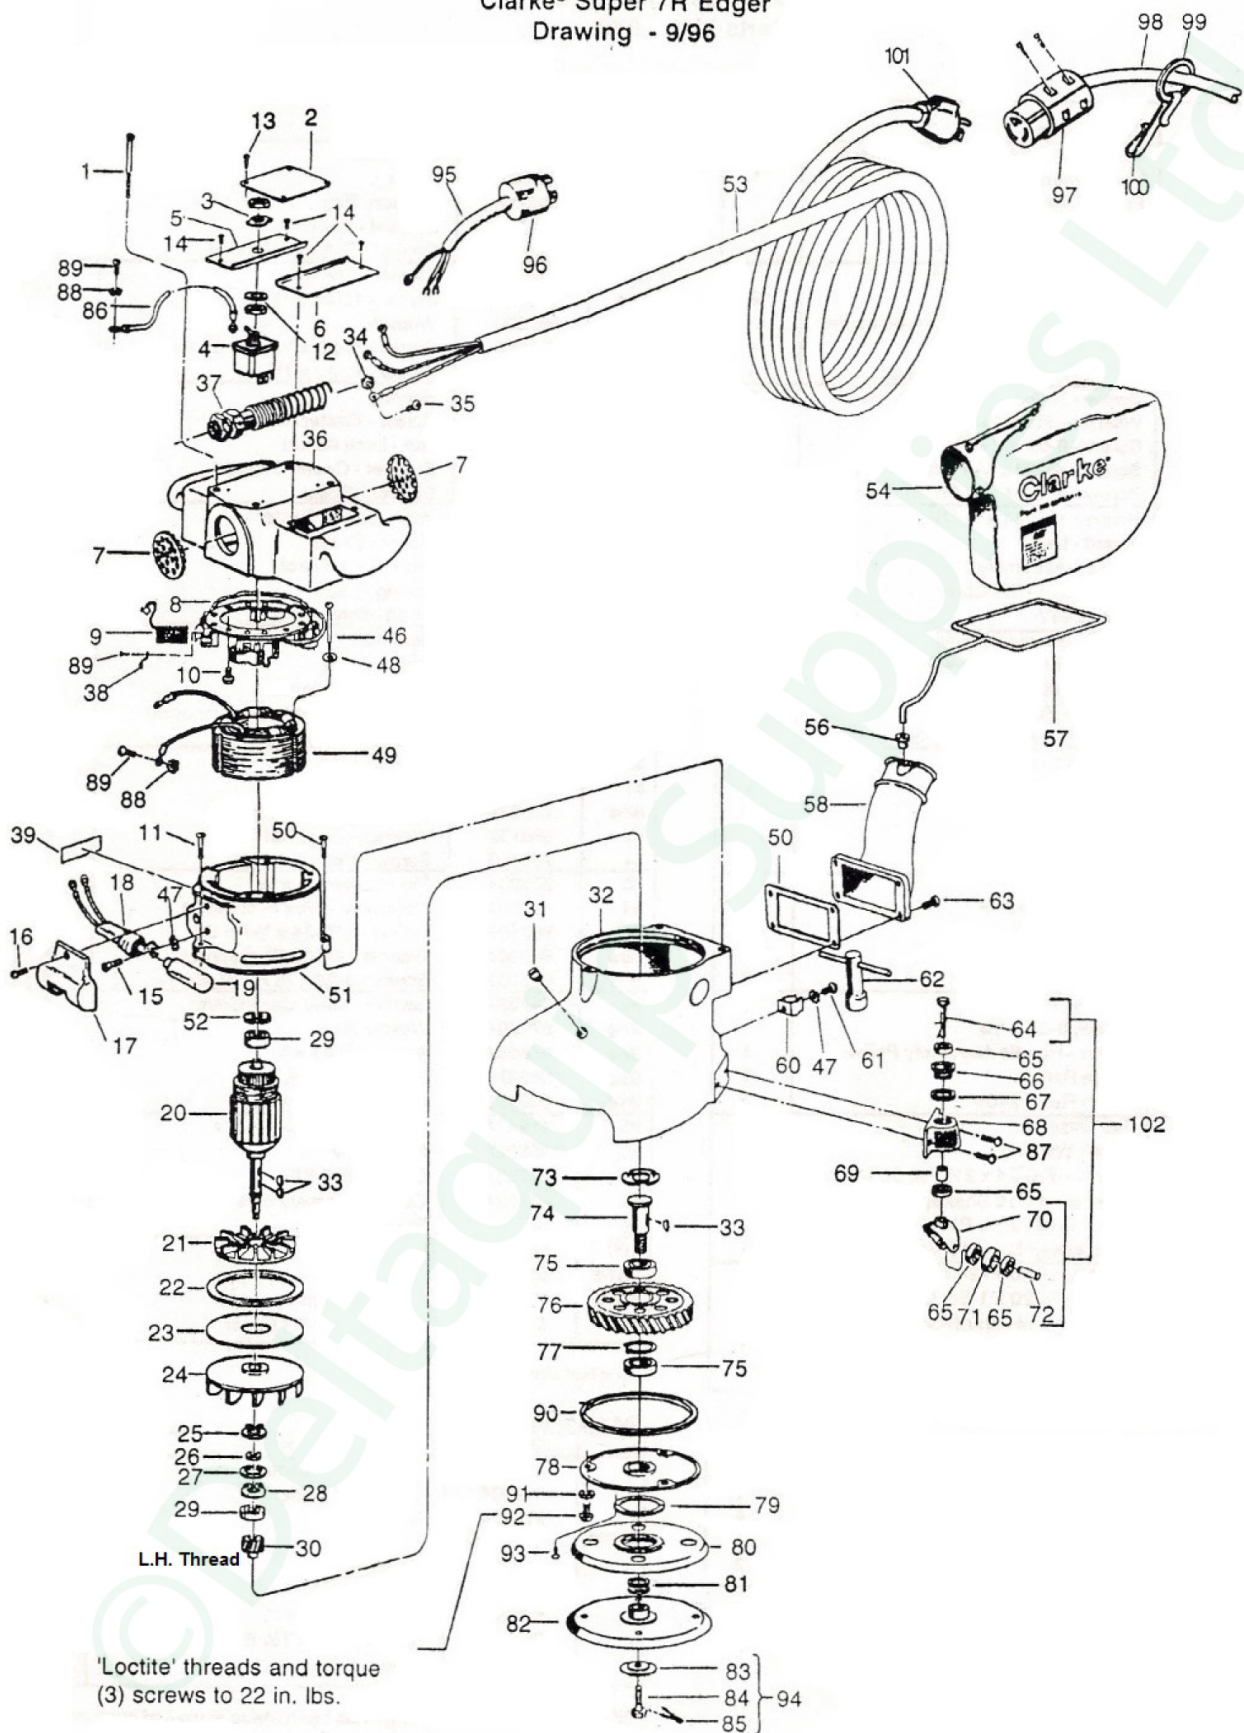

Clarke® Super 7R Edger
Drawing - 9/96

Ref#	Part No.	Description	Qty
1	962404	Screw - #10-24 x 3 1/4 Ft. St. Mach.	4
2	73906A	Plate - Name	1
3	646302	Plate - Dial	1
4 ♦	47394A	Switch - Toggle	1
5 ♦	302310	Cover, Motor Brush R.H.	1
6 ♦	302309	Cover, Motor Brush L.H.	1
7	306802	Plug - Vent	2
8	301308	Assembly - Brush Block (see below)	1
9	40818A	Brush - Motor	4
10 ♦	962727	Screw - #8-32 x 1/2 Pan Head	4
11 ♦	962988	Screw - 1/4 -20 x 1 1/4 Pan St. Mach.	1
12	980662	Washer - SH #1224-00 Lock	1
13	962555	Screw - 0-00 x 3/16 Ft. St.	4
14 ♦	962545	Screw - #6-32 x 3/8 Ft. St. Type 23	4
15 ♦	85393A	Screw - #10-24 x 1/4 Pn. St. Mach.	1
16 ♦	962310	Screw - #10-24 x 1/2 OV	1
17	303602	Guard - Lamp	1
18	46902A	Socket - Assembly	1
19	911113	Bulb - Light 15W Clear	1
20	10101B	Armature Assembly-w/Fan - 115V	1
21	303004	Fan - Motor	1
22	293403	Gasket - Fan Baffle	1
23	306102	Plate - Exhaust Fan Baffle	1
24	303002	Fan - Vacuum	1
25	307302	Ring - Retaining	1
26	308202	Spacer - Bearing	1
27	297604	Seal - Oil	1
28	407302	Ring - Retaining	1
29	902567	Bearing	2
30	293514	Pinion - Armature	1
31	316804	Plug - Pipe 1/8	1
32	304204	Housing - Gear	1
33 ♦	915028	Key 1/8 x 3/8 Woodruff	3
34 ♦	980621	Washer, #1108	1
35 ♦	962550	Screw, 8-32 x 3/16	1
36	302312	Cover - Handle Assembly Polish	1
37 ♦	467504	Strain Relief	1
38 ♦	47502A	Tab Offset 1/4	4
39 ♦	73285A	Label, Warning	1
46 ♦	962211	Screw - #10-24 x 2 1/2 Pn. St. Mach.	2
47	980603	Washer - #1110 Shakeproof	7
48	980643	Washer - #10 7/16 Plain	2
49	42801B	Field assembly - 115 Volt	1
50	962454	Screw - 1/4-20 x 1 Sc. Cap	2
51	304208	Housing and Guard Assembly	1
52	298306	Spring Load	1
53 ♦	42018A	Cord Assembly, 115V	1

	301308	Brush Block Assembly	1
a	301307	Block	1
b	164004	Holder	4
c	168324	Spring	4
d	911953	Wire Lead Assembly	2

NOTE: Assembly 12208A Includes parts 64, 65, 70, 71, & 72

Ref#	Part No.	Description	Qty
54	60723A	Bag, Dust	1
56 ♦	50732A	Bearing	1
57 ♦	69621A	Support, Bag	1
58 ♦	21108A	Bracket - Exhaust	1
59	293406	Gasket - Exhaust Bracket	1
60	302101	Clamp - Wrench	1
61 ♦	962987	Screw - 10-24 x 3/8 Pn. St. Typ.	1
62	987300	Wrench	1
63	962289	Screw - 1/4-20 x 3/4 Soc. St. Cap	4
64	85702A	Screw - 1/4-20 x 1 1/4	2
65 ♦	50740A	Bearing	8
66	960130	Screw - Caster Adjusting	2
67	920670	Nut - Lock Adjust	2
68	310803	Bracket - Caster Support	2
69	298215	Spacer - Collar	2
70 ♦	29404A	Yoke, Edger, Caster	2
71	299704	Roller - Caster	2
72	925592	Pin - 1/4 x 1 Spirol	2
73	318303	Spring - Load	1
74	307702	Shaft - Drive Gear	1
75	902550	Bearing	2
76	303502	Gear - Drive	1
77	067304	Ring - Retaining	1
78	302306	Cover - Assembly Gear Housing	1
79	317204	Retainer - Disc Guard	1
80	293616	Guard - Disc	1
81	980088	Washer	2
82 ♦	13203A	Assembly - Sanding Pad	1
83	980132	Washer - Disc/Retaining	1
84	960140	Screw - Paper Lock	1
85	925004	Pin - Cotter 1/16 x 1/2	1
86	49030A	Assembly - Wire Processed	1
87 ♦	962109	Screw - #10-24 x 3/8 Pn SS	4
88 ♦	980607	Washer - #1106 Shakeproof	4
89 ♦	962003	Screw - 6-32 x 3/8 Rd St. Sems	4
90	34232A	Gasket - Gear Case Cover	4
91 ♦	87609A	Washer Seal	3
92 ♦	84808A	Screw, 10-24 x 3/4	3
93 ♦	962974	Screw, 6-32 x 1/4	4
94 ♦	960125	Assembly Screw Lock	1
99	57809A	Ring	1
100	54812A	Hook	1
101 ♦	911248	Plug 115V	1
102 ♦	12208A	Caster Assembly	2
NI	31407A	Case, Edger (Not Illustrated)	1

NOTE: ♦ indicates a change has been made since last publication of this manual.

Accessories Available

	312404	Cutter Disc Assembly	1
a	311306	Blade - Disc Cutter	1
b	312904	Eject Disc Cutter	1
c	315604	Mallet	1
d	317004	Punch Center	1
e	317304	Ring Disc Cutter	1
f	762005	Clamp	1
g	920208	Nut - 1/4-20 Hex	1
h	962013	Screw 1/4-20 x 1 1/4 R	1
i	962233	Screw 1/4-20 x 3/16 S	1